

Assembly Instructions



LINK

- If you have questions, please call Customer Service Toll Free at 888.705.0777.
- Proper assembly requires two people to stand table upright.
- Start bolts by hand to prevent cross threading.
- Assemble on a soft and smooth surface to prevent damage to your top.
- Lock wheels before linking tables together.

Parts Included






















Recommended **Tools**























- www.specialt.net
- Toll Free 888.705.0777
- Local 678.879.0777
- Fax 678.456.6046



Assembly Instructions

Assembly

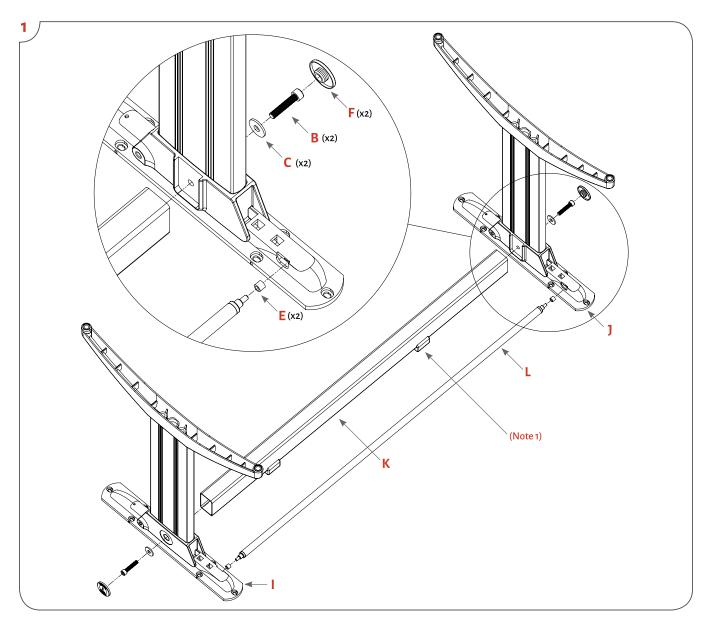



Notes:

1) Ensure the rubber bumpers on the support beam ('K') are facing down during assembly.



Assembly Instructions

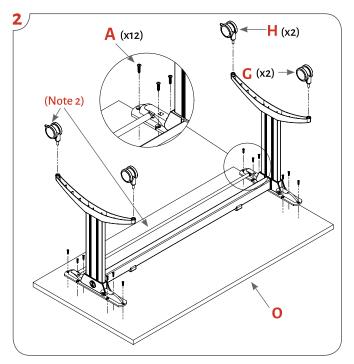

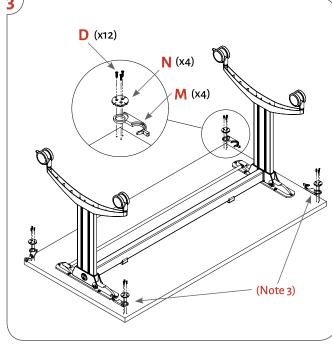

Notes:

- 2) Install the locking casters ('H') on the user side. The user side is the side with the unlock bar ('L').
- 3) Install the 4 Flekssit connectors ('M' & 'N') on the corners only. Additional predrill locations are available for non-standard configurations.



Enjoy Your Table!